

TECHNICAL INFORMATION @ 20°C AND 24Vdc

	HD408T	HD4V8T
Sensor	Piezoresistive	
Measurement range	10, 20, 50, 100, 200, 500, 1000, 2000 mbar ±10, ±20, ±50, ±100, ±200, ±500, ±1000, ±2000 mbar	
Output signal	4 ... 20 mA	0 ... 10 Vdc standard; 0 ... 5 Vdc, 1 ... 5 Vdc on request
Precision	±0.5 % F.S. @ 20°C	
Resolution	Infinite	
Temperature effects	< 1% F.S., zero; <1% F.S., span from -20°C to +60°C (from -4° to 140°F)	
Time stability	< 1 % F.S. over 6 months at 20°C	
Startup time	1 sec. at 99% of full scale reading	
Response time	< 10 ms until it reaches the stated precision by applying a step pressure level	
Power	8 ... 30 Vdc	16 ... 40 Vdc or 24 Vac with output 0 ... 10 Vdc 10 ... 40 Vdc or 24 Vac with outputs 0 ... 5 Vdc, 1 ... 5 Vdc
Absorption	< 4 mA	20 mA @ 20°C, 24 Vdc
Load resistance	$R_{Lmax} = 727 \Omega$ a 24Vcc $R_{Lmax} = \frac{Vdc-8}{22 \text{ mA}}$	Minimum input resistance 10kΩ
Operating temperature	-20 ... +60°C	
Storage temperature	-20 ... +80°C	
Compatible elements	air and dry gases only	
Overpressure limit	350mbar for the models 10, 20, 50, 100 mbar 3X F.S. for all the other models	
Pressure connection	With Ø 5mm flexible tube	
Electric connection	Screw terminal box	
Case	MACROLON	
Case size	64x58x34	
Protection degree	IP67	




HD 408T..., HD 4V8T... RELATIVE OR DIFFERENTIAL ATMOSPHERIC PRESSURE TRANSMITTERS

The HD408T, HD4V8T are analog output relative or differential atmospheric pressure transmitters; they are used in all those applications where non corrosive air or gas need to be monitored, with pressure fields from 10 mbar to 2000 mbar. The piezoresistive sensor gives extremely precise and stable measurements of the applied differential pressure, with excellent repeatability, low hysteresis, and very good temperature stability.

The output signal of the sensor is conditioned to provide either a current output (model HD408T) or a voltage output (model HD4V8T) linearly proportional to the applied differential pressure.

The transmitters are ready to use as they have been calibrated at the factory. They are used to monitor clean room barometric pressure, to control filters, to measure flows (employment with the Pitot tube), for packing and packaging machines, and to control ventilation.

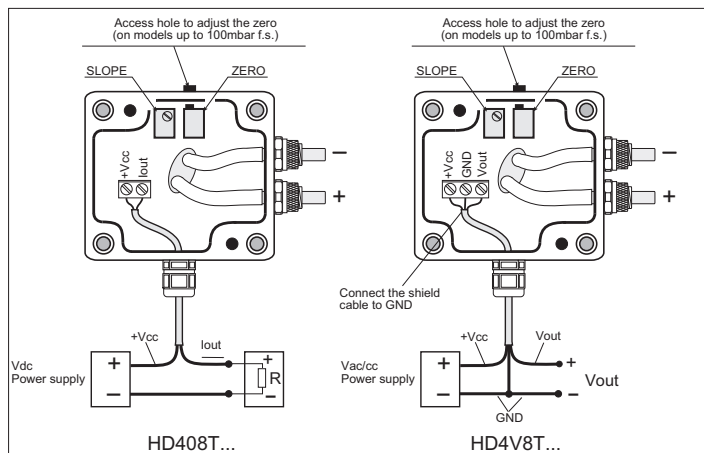


INSTALLATION

In all models the sensor and electronic parts are housed in a robust case in MACROLON with IP67 degree of protection. Opening the cover, the holes that allow to secure the transmitter's base directly to a panel or a wall, become available. HD408T, HD4V8T can be mounted in any position, the deviation of the zero due to the mounting position is in the worst case (10 mbar range) less than 1% F.S. and can be corrected with an appropriate regulating potentiometer, that can be accessed from outside, for pressures up to 100mbar.

Pressure

MECHANICAL DIMENSIONS

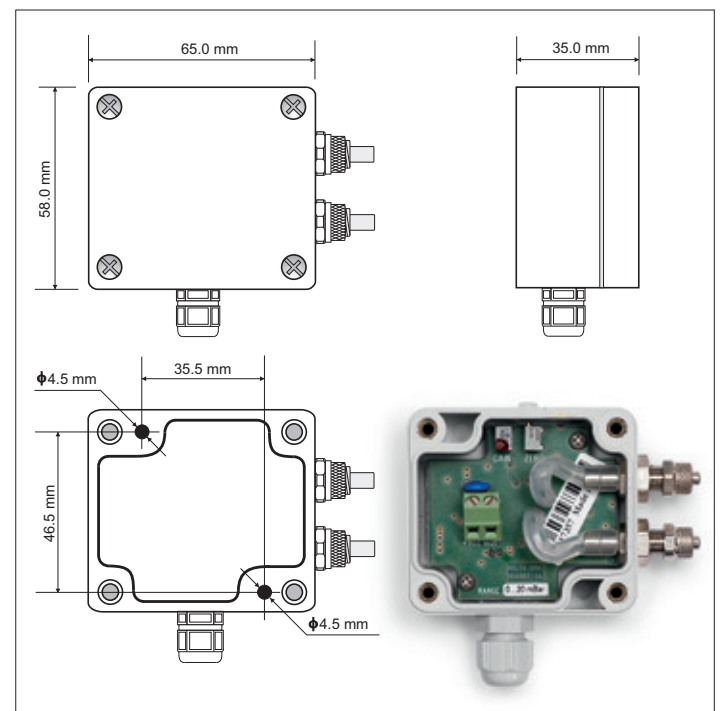

ORDERING CODES


HD 408T-1 G

- Output:**
 - 1 = 0...5Vdc
 - 2 = 1...5Vdc
 - 3 = 0...10Vdc
 - not indicated = 4...20mA
- D** = Differential pressure -f.s ... +f.s with regard to the atmosphere
- G** = Relative pressure 0... +f.s with regard to the atmosphere
- B** = bar
- MB** = mbar
- Nominal full scale**
10 - 20 - 50 - 100 - 200 - 500 mbar (MB)
1 - 2bar (B)
- Output Type:**
 - 0 = Current
 - V = Voltage

	RANGE	OUTPUT 4...20mA	OUTPUT 0...10Vdc	OUTPUT 0...5Vdc	OUTPUT 1...5Vdc
RELATIVE	0...10mbar	HD408T-10MBG	HD4V8T-10MBG3	HD4V8T-10MBG1	HD4V8T-10MBG2
	0...20mbar	HD408T-20MBG	HD4V8T-20MBG3	HD4V8T-20MBG1	HD4V8T-20MBG2
	0...50mbar	HD408T-50MBG	HD4V8T-50MBG3	HD4V8T-50MBG1	HD4V8T-50MBG2
	0...100mbar	HD408T-100MBG	HD4V8T-100MBG3	HD4V8T-100MBG1	HD4V8T-100MBG2
	0...200mbar	HD408T-200MBG	HD4V8T-200MBG3	HD4V8T-200MBG1	HD4V8T-200MBG2
	0...500mbar	HD408T-500MBG	HD4V8T-500MBG3	HD4V8T-500MBG1	HD4V8T-500MBG2
	0...1000mbar	HD408T-1BG	HD4V8T-1BG3	HD4V8T-1BG1	HD4V8T-1BG2
0...2000mbar	HD408T-2BG	HD4V8T-2BG3	HD4V8T-2BG1	HD4V8T-2BG2	

	RANGE	OUTPUT 4...20mA	OUTPUT 0...10Vdc	OUTPUT 0...5Vdc	OUTPUT 1...5Vdc
DIFFERENTIAL	-10...10mbar	HD408T-10MBD	HD4V8T-10MBD3	HD4V8T-10MBD1	HD4V8T-10MBD2
	-20...20mbar	HD408T-20MBD	HD4V8T-20MBD3	HD4V8T-20MBD1	HD4V8T-20MBD2
	-50...50mbar	HD408T-50MBD	HD4V8T-50MBD3	HD4V8T-50MBD1	HD4V8T-50MBD2
	-100...100mbar	HD408T-100MBD	HD4V8T-100MBD3	HD4V8T-100MBD1	HD4V8T-100MBD2
	-200...200mbar	HD408T-200MBD	HD4V8T-200MBD3	HD4V8T-200MBD1	HD4V8T-200MBD2
	-500...500mbar	HD408T-500MBD	HD4V8T-500MBD3	HD4V8T-500MBD1	HD4V8T-500MBD2
	-1000...1000mbar	HD408T-1BD	HD4V8T-1BD3	HD4V8T-1BD1	HD4V8T-1BD2
-2000...2000mbar	HD408T-2BD	HD4V8T-2BD3	HD4V8T-2BD1	HD4V8T-2BD2	

Examples of connections with the HD9022 and DO9404 indicators/regulators

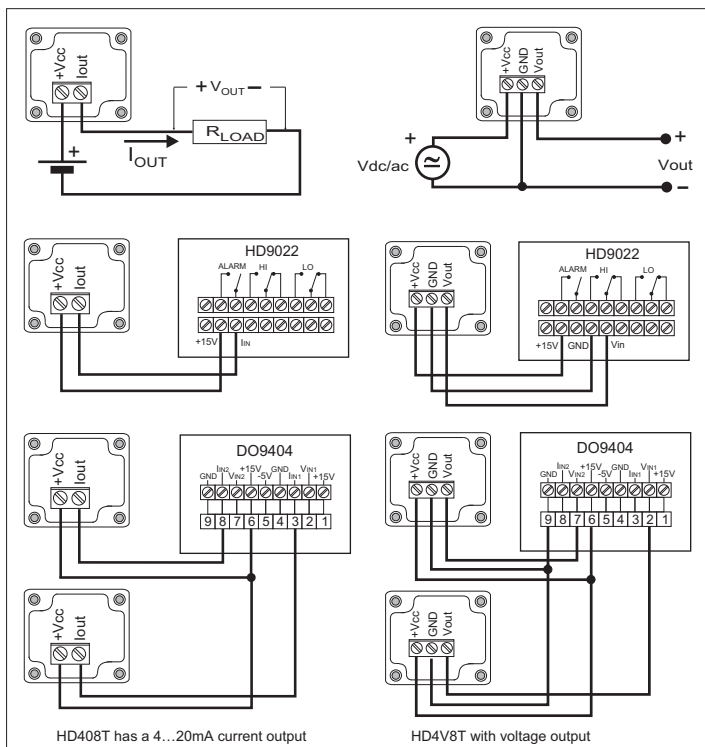

HD 4V8T Baro



HD 4V8T Baro BAROMETRIC TRANSMITTER

Barometric transmitter to wall mount for indoor use, with 0...1 Vdc analog output. Measuring range 600...1100mbar. Power supply 10...40 Vdc. Working temperature -30°C... 60°C. Suitable for installation in the housings for weather stations HD32.35, HD32.35FP, HD32.36 and HD32.36FP.

Technical specifications

Type of sensor	Piezoresistive
Measuring range	600±1100 mbar
Analog output	0÷1Vdc
Accuracy	±0.5 mbar, @ 20°C
Resolution	Infinite
Temperature drift	<1% F.S., zero; <1% F.S., span from -20°C to +60°C (-4°F to 140°F)
Long term stability	<0.25% F.S. at 6 months at 20°C
Settling Time	1 sec. At 99% of the measure
Response time	<200ms after pressure stabilization
Power Supply	10÷40 Vdc
Current Supply	< 4 mA
Working temperature	-30 ... +60°C
Compatibility	Dry air and gases, non-corrosive
Overpressure	2 bar – 30 psi
Dimensions	65mm x 58mm x 35mm





HD402T PRESSURE TRANSMITTERS

- Sensor with high accuracy and stability
- Measurement of pressures relative to the atmosphere or differential pressures
- Dual analogue output: current and voltage
- Versions with or without LCD display

Applications

- Control of air conditioning and ventilation
- Control of filters
- Monitoring of clean rooms
- Pneumatic controls
- Respirators
- Vaporizers



Description

The series of transmitters HD402T... is suitable for measuring relative pressure with respect to atmosphere or differential pressure in the range from 50 Pa to 200 kPa.

These transmitters use a silicon piezoresistive sensor with high accuracy and temperature compensation, which has excellent linearity, repeatability and stability over the time.

The output signal of the sensor is converted into a standard analog output to be chosen between voltage 0...10 V or current 0...20 mA or 4...20 mA. The current output signal can be transmitted over long distances with high immunity to interference (the maximum distance depends on the load and the section of the connection cables, but distances of several hundred meters are commonly reached).

The tool offers a wide range of configurations. Besides the full scale (f.s.), different measuring units can be chosen for each instrument, and it is also possible to set the unipolar (0 ... +f.s.) or bipolar (-f.s. ... +f.s.) measuring range.

The configuration can be made through a series of dip switches mounted on the circuit board or by connecting the serial port of the transmitter to the PC.

Thanks to the particular sensor used, the transmitters are insensitive to orientation and position. Moreover, the high stability of the sensor over the time and in comparison to the changes in temperature allows to eliminate the operations of maintenance typically required to compensate for the aging and the deviation of the sensor zero.

The option "display" (L) is available, in this case the values of pressure are displayed on a 4-digit display under the unit of measure set by the user.

The transmitters are supplied ready for use and factory calibrated in 3 points.

As an alternative to the configuration of the transmitter by means of the dip switches, a serial output is available for the configuration via PC.

Power supply with 24Vac alternating voltage or 16...40 Vdc direct voltage.

Technical specifications

Sensor	Piezoresistive, High stability
Measuring range	from 0...50 Pa to 0...200 kPa both relative and differential (please refer to table 1)
Resolution	Please refer to table 2
Accuracy @ 25 °C	± 1.5% f.s. nominal for HD402T1 ± 0.75% f.s. nominal for HD402T2 ± 1% f.s. nominal for HD402T3, HD402T4 and HD402T5
Accuracy @ 0...50 °C	± 3% f.s. nominal for HD402T1 ± 1% f.s. nominal for HD402T2, HD402T3, HD402T4 and HD402T5
Long term stability (1000 h) @ 25 °C	± 0.5% f.s. nominal for HD402T1 and HD402T2 ± 0.35% f.s. nominal for HD402T3 ± 0.25% f.s. nominal for HD402T4 and HD402T5
Output signal	0...10 Vdc $R_L > 10\text{ k}\Omega$ and 0...20 or 4...20 mA $R_L < 500\ \Omega$
Response time	0.25 seconds for the analog outputs 0.5 seconds for the display updating
Overpressure limit	50 kPa for the models with f.s. up to 10 kPa 200 kPa for the model with f.s. 100 kPa 400 kPa for the model with f.s. 200 kPa
Compatible media	Only air and non-aggressive dry gases
Power supply	24 Vac $\pm 10\%$ or 16...40 Vdc
Absorption	< 1 W @ 24 Vdc
Pressure connection	\varnothing 5 mm hose
Electrical connections	Screw terminal block, max 1.5 mm ² , PG9 fairlead for the input cable
Operating conditions	-10...+60 °C / 0...95% RH
Storage temperature	-20...+70 °C
Housing dimensions	80 x 84 x 44 mm
Protection degree	IP67

TAB. 1: full scale values and units of measurement

Model	Pa	kPa	mbar	mmH ₂ O	inchH ₂ O	mmHg	PSI
HD402T1	50/100/250	---	0,5/1/2,5	5/10/25	0,2/0,4/1	---	---
HD402T2	250/500/1000	---	2,5/5/10	25/50/100	1/2/4	---	---
HD402T3	---	2,5/5/10	25/50/100	---	---	10/25/50	0,4/0,75/1,5
HD402T4	---	25/50/100	250/500/1000	---	---	100/250/500	4/7,5/15
HD402T5	---	50/100/200	500/1000/2000	---	---	250/500/1000	10/15/30

TAB. 2: resolution

Modello	Pa	kPa	mbar	mmH ₂ O	inchH ₂ O	mmHg	PSI
HD402T1	0.1	---	0.001	0.01	0.001	---	---
HD402T2	1	---	0.01	0.1	0.01	---	---
HD402T3	---	0.01	0.1	---	---	0.01	0.001
HD402T4	---	0.1	1	---	---	0.1	0.01
HD402T5	---	0.1	1	---	---	1	0.01

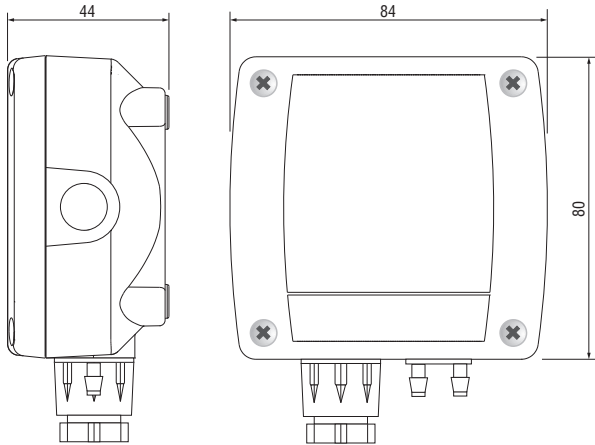


Fig. 1: dimensions (mm)

Installation

In any model the sensor and the electronics are housed in a rugged plastic case with IP67 protection degree. By opening the lid, 3 mm diameter holes are available so to allow securing the base of the transmitter directly to a panel or to the wall.

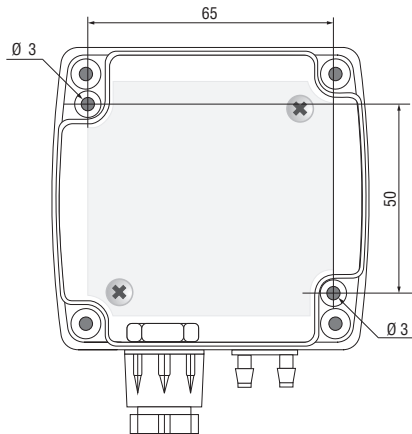


Fig. 2: fixing holes (dimensions in mm)

The transmitter can be mounted in any position, but typically it is secured on a vertical wall with the pressure taps facedown. The deviation of the zero due to the mounting position can be corrected by using CAL ZERO. The procedure for the manual calibration of the zero is the following:
 make sure that the transmitter is powered at least for 1 hour;
 disconnect both the tubes from the pressure + and - inputs;
 press CAL ZERO until the red LED starts flashing;
 when the red LED turns off, the zeroing procedure is completed and you can reconnect the tube to the pressure connections.
 It is recommended to follow the auto-zero procedure at least once a year under normal operating conditions.

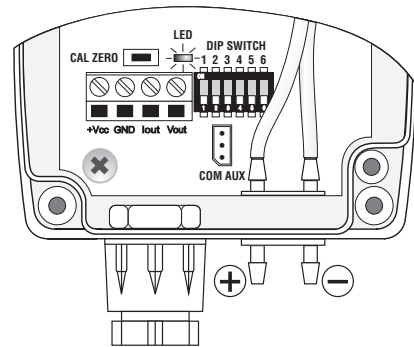


Fig. 3: CAL ZERO key and configuration dip switch

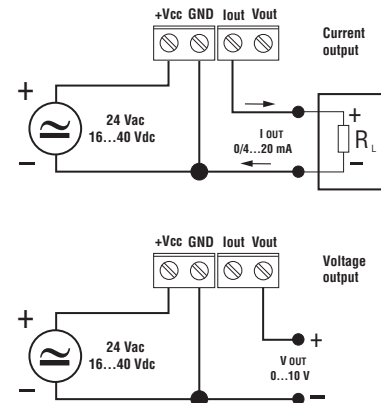


Fig. 4: electrical connections

Configuration

Setting the configuration mode: the transmitter can be configured by using the dip switches on the circuit board or via the serial communication port COM AUX. The choice of the configuration mode is done with the dip switch 1:

- Dip switch 1 = ON → the configuration set through the dip switches 2...6 is used
- Dip switch 1 = OFF → the configuration set via serial port is used

Configuration by dip switch

The configuration of the dip switches is used by the transmitter only if the dip switch 1 is ON.
 The dip switches 2 and 3 select the low, intermediate or high measuring range.
 The dip switches 4 and 5 select one of the four available units in the model.
 The dip switch 6 sets the unipolar (0... + f.s.) or bipolar (-f.s... + f.s.) measuring range.
 A dip switch is OFF when placed down, towards the serial connector. Instead, it is ON if placed up, towards the DIP SW sign.
 The following tables report the measuring range, for each model, corresponding to the analog outputs according to dip switch positions.

TAB. 3: measuring ranges for outputs of the model HD402T1

Dip switch number										
6	2	3	4		5		4		5	
			OFF	OFF	ON	OFF	OFF	ON	ON	ON
			Pa		mmH ₂ O		inchH ₂ O		mbar	
OFF	OFF	ON	0...50.0 Pa		0...5.00 mmH ₂ O		0...0.200 inchH ₂ O		0...0.500 mbar	
	ON	OFF	0...100.0 Pa		0...10.00 mmH ₂ O		0...0.400 inchH ₂ O		0...1.000 mbar	
	OFF	OFF	0...250.0 Pa		0...25.00 mmH ₂ O		0...1.000 inchH ₂ O		0...2.500 mbar	
	ON	ON	0...250.0 Pa		0...25.00 mmH ₂ O		0...1.000 inchH ₂ O		0...2.500 mbar	
ON	OFF	ON	-50.0...+50.0 Pa		-5.00...+5.00 mmH ₂ O		-0.200...+0.200 inchH ₂ O		-0.500...+0.500 mbar	
	ON	OFF	-100.0...+100.0 Pa		-10.00...+10.00 mmH ₂ O		-0.400...+0.400 inchH ₂ O		-1.000...+1.000 mbar	
	OFF	OFF	-250.0...+250.0 Pa		-25.00...+25.00 mmH ₂ O		-1.000...+1.000 inchH ₂ O		-2.500...+2.500 mbar	
	ON	ON	-250.0...+250.0 Pa		-25.00...+25.00 mmH ₂ O		-1.000...+1.000 inchH ₂ O		-2.500...+2.500 mbar	

TAB. 4: measuring ranges for outputs of the model HD402T2

Dip switch number										
6	2	3	4		5		4		5	
			OFF	OFF	ON	OFF	OFF	ON	ON	ON
			Pa		mmH ₂ O		inchH ₂ O		mbar	
OFF	OFF	ON	0...250 Pa		0...25.0 mmH ₂ O		0...1.00 inchH ₂ O		0...2.50 mbar	
	ON	OFF	0...500 Pa		0...50.0 mmH ₂ O		0...2.00 inchH ₂ O		0...5.00 mbar	
	OFF	OFF	0...1000 Pa		0...100.0 mmH ₂ O		0...4.00 inchH ₂ O		0...10.00 mbar	
	ON	ON	0...1000 Pa		0...100.0 mmH ₂ O		0...4.00 inchH ₂ O		0...10.00 mbar	
ON	OFF	ON	-250...+250 Pa		-25.0...+25.0 mmH ₂ O		-1.00...+1.00 inchH ₂ O		-2.50...+2.50 mbar	
	ON	OFF	-500...+500 Pa		-50.0...+50.0 mmH ₂ O		-2.00...+2.00 inchH ₂ O		-5.00...+5.00 mbar	
	OFF	OFF	-1000...+1000 Pa		-100.0...+100.0 mmH ₂ O		-4.00...+4.00 inchH ₂ O		-10.00...+10.00 mbar	
	ON	ON	-1000...+1000 Pa		-100.0...+100.0 mmH ₂ O		-4.00...+4.00 inchH ₂ O		-10.00...+10.00 mbar	

TAB. 5: measuring ranges for outputs of the model HD402T3

Dip switch number										
6	2	3	4		5		4		5	
			OFF	OFF	ON	OFF	OFF	ON	ON	ON
			kPa		mmHg		PSI		mbar	
OFF	OFF	ON	0...2.50 kPa		0...10.00 mmHg		0...0.400 PSI		0...25.0 mbar	
	ON	OFF	0...5.00 kPa		0...25.00 mmHg		0...0.750 PSI		0...50.0 mbar	
	OFF	OFF	0...10.00 kPa		0...50.00 mmHg		0...1.500 PSI		0...100.0 mbar	
	ON	ON	0...10.00 kPa		0...50.00 mmHg		0...1.500 PSI		0...100.0 mbar	
ON	OFF	ON	-2.50...+2.50 kPa		-10.00...+10.00 mmHg		-0.400...+0.400 PSI		-25.0...+25.0 mbar	
	ON	OFF	-5.00...+5.00 kPa		-25.00...+25.00 mmHg		-0.750...+0.750 PSI		-50.0...+50.0 mbar	
	OFF	OFF	-10.00...+10.00 kPa		-50.00...+50.00 mmHg		-1.500...+1.500 PSI		-100.0...+100.0 mbar	
	ON	ON	-10.00...+10.00 kPa		-50.00...+50.00 mmHg		-1.500...+1.500 PSI		-100.0...+100.0 mbar	

TAB. 6: measuring ranges for outputs of the model HD402T4

Dip switch number										
6	2	3	4		5		4		5	
			OFF	OFF	ON	OFF	OFF	ON	ON	ON
			kPa		mmHg		PSI		mbar	
OFF	OFF	ON	0...25.0 kPa		0...100.0 mmHg		0...4.00 PSI		0...250 mbar	
	ON	OFF	0...50.0 kPa		0...250.0 mmHg		0...7.50 PSI		0...500 mbar	
	OFF	OFF	0...100.0 kPa		0...500.0 mmHg		0...15.00 PSI		0...1000 mbar	
	ON	ON	0...100.0 kPa		0...500.0 mmHg		0...15.00 PSI		0...1000 mbar	
ON	OFF	ON	-25.0...+25.0 kPa		-100.0...+100.0 mmHg		-4.00...+4.00 PSI		-250...+250 mbar	
	ON	OFF	-50.0...+50.0 kPa		-250.0...+250.0 mmHg		-7.50...+7.50 PSI		-500...+500 mbar	
	OFF	OFF	-100.0...+100.0 kPa		-500.0...+500.0 mmHg		-15.00...+15.00 PSI		-1000...+1000 mbar	
	ON	ON	-100.0...+100.0 kPa		-500.0...+500.0 mmHg		-15.00...+15.00 PSI		-1000...+1000 mbar	

TAB. 7: measuring ranges for outputs of the model HD402T5

Dip switch number										
6	2	3	4		5		4		5	
			OFF	OFF	ON	OFF	OFF	ON	ON	ON
			kPa		mmHg		PSI		mbar	
OFF	OFF	ON	0...50.0 kPa		0...250 mmHg		0...10.00 PSI		0...500 mbar	
	ON	OFF	0...100.0 kPa		0...500 mmHg		0...15.00 PSI		0...1000 mbar	
	OFF	OFF	0...200.0 kPa		0...1000 mmHg		0...30.00 PSI		0...2000 mbar	
	ON	ON	0...200.0 kPa		0...1000 mmHg		0...30.00 PSI		0...2000 mbar	
ON	OFF	ON	-50.0...+50.0 kPa		-250...+250 mmHg		-10.00...+10.00 PSI		-500...+500 mbar	
	ON	OFF	-100.0...+100.0 kPa		-500...+500 mmHg		-15.00...+15.00 PSI		-1000...+1000 mbar	
	OFF	OFF	-200.0...+200.0 kPa		-1000...+1000 mmHg		-30.00...+30.00 PSI		-2000...+2000 mbar	
	ON	ON	-200.0...+200.0 kPa		-1000...+1000 mmHg		-30.00...+30.00 PSI		-2000...+2000 mbar	

Configuration via the serial port COM AUX

The configuration set with the serial communication is used by the transmitter only if the dip switch 1 is OFF.

In order to modify the settings, please proceed as follows:

Connect the serial COM AUX output of the transmitter to the RS232 port (via the RS27 cable) or USB (via the cable CP27) of the PC. If you use the CP27 cable, install the USB drivers on your PC.

On the PC, launch a program for serial communication (e.g. Hyperterminal), set the baud rate to 115200 and the communication parameters to 8N1.

Send the commands given in Table 9 to set the measurement range corresponding to the analog outputs.

TAB. 9: comandi seriali di configurazione

Command	Response	Description
Kn	&	Set the unit of measurement of index n HD402T1 & HD402T2 HD402T3 & HD402T4 & HD402T5 n=0 → Pa n=0 → kPa n=1 → mmH ₂ O n=1 → mmHg n=2 → inchH ₂ O n=2 → PSI n=3 → mbar n=3 → mbar
Rn	&	Sets the measuring range of index n n=0 → high range (e.g. 250 Pa / 25 mmH ₂ O / 1 "H ₂ O / 2,5 mbar in HD402T1) n=1 → intermediate range (e.g. 100 Pa / 10 mmH ₂ O / 0,4 "H ₂ O / 1 mbar in HD402T1) n=2 → low range (e.g. 50 Pa / 5 mmH ₂ O / 0,2 "H ₂ O / 0,5 mbar in HD402T1)
PU	&	Set the unipolar measuring range (0...+f.s.)
PB	&	Set the bipolar measuring range (-f.s....+f.s.)
U0	&	Set the interval 0...20 mA for the analog current output
U1	&	Set the interval 4...20 mA for the analog current output

In order to read the settings of the transmitter, send the commands described in Table 10.

TAB. 10: serial commands to read the configuration

Comando	Risposta	Descrizione
G0	See the example below	It reads the current configuration of the transmitter. If the dip switch 1 is OFF, it returns the configuration set via the serial port. If the dip switch 1 is set to ON, it returns the configuration set by dip switch
GF	See the example below	It reads the configuration set by the serial port
GS	See the example below	It reads the configuration set by the dip switch

The commands for reading the configuration return a string consisting of:

- model
- full scale value set for the analog outputs
- polarity of the measuring range (U=unipolar, B=bipolar)
- range of the analog output current (0=0...20mA, 4=4...20 mA)

for example: the string "HD402T2 5.00mbar B40" indicates that the transmitter model is HD402T2, the full scale set for the analog outputs is 5.00 mbar, the measuring range is bipolar (-5.00...+5.00 mbar) and the analog current output type is 4...20 mA. The last character of the string (0 in the example) is a confidential code.

Display

Models with suffix L are equipped with a 4-digit LCD display. In models with LCD option, the measuring range shown on the display is always bipolar (-f.s....+f.s.) and related to the maximum full scale available in the model (the setting of the measuring range only affects the behavior of the analog outputs). The measure on the display is updated twice a second.

Error messages:

- Undr → it appears if the measured value is less than the minimum measurable value
- OvEr → it appears if the measured value exceeds the maximum measurable value
- CAL Error → it appears at the end of the zero calibration if the maximum off-set value possible to be corrected is exceeded.

Purchasing codes

HD402T...: Pressure relative to the atmosphere or differential pressure transmitters. For dry air and non-aggressive gases. Barbed connection diam. 5 mm for hose. Analogue output at choice between voltage 0...10 V or current 0...20 mA or 4...20 mA. Operating temperature -10...+60 °C. Power supply 16...40 Vdc or 24 Vac.

HD402T - **L**

L = with LCD display

Nominal full scale (f.s.):	
1	= 250 Pa / 25 mmH ₂ O / 1 inchH ₂ O / 2,5 mbar
2	= 1000 Pa / 100 mmH ₂ O / 4 inchH ₂ O / 10 mbar
3	= 10 kPa / 50 mmHg / 1,5 PSI / 100 mbar
4	= 100 kPa / 500 mmHg / 15 PSI / 1000 mbar
5	= 200 kPa / 1000 mmHg / 30 PSI / 2000 mbar

Accessories

- Included:
 N°1 piece of silicone tubing Ø3.2/Ø6.4, length 2m
 N°2 plastic fittings HD434T.5

Upon request:

- HD3719:** Air inlet for square or cylindrical channel.
- HD3721:** Air inlet for cylindrical channel, made of plastic.
- RS27:** RS232 null-modem serial connection cable with SubD 9-pin connector on the PC side and 3-pole connector on the side of the instrument.
- CP27:** Serial connection cable with USB connector on the PC side and 3-pole connector on the side of the instrument. The cable has a built-in USB/RS232 converter and it connects the instrument directly to the USB port of the PC.

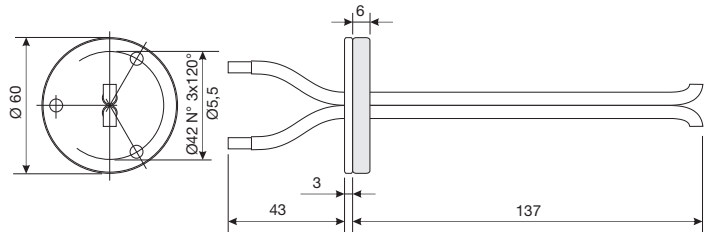


Fig. 5: channel probe AP3719

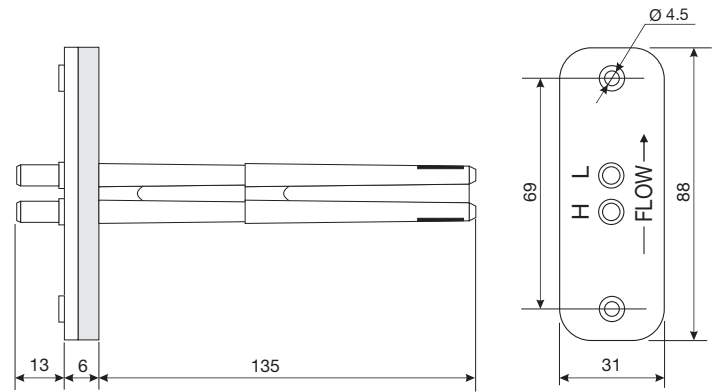


Fig. 6: channel probe AP3721

Example of connection with the indicator controller HD9022

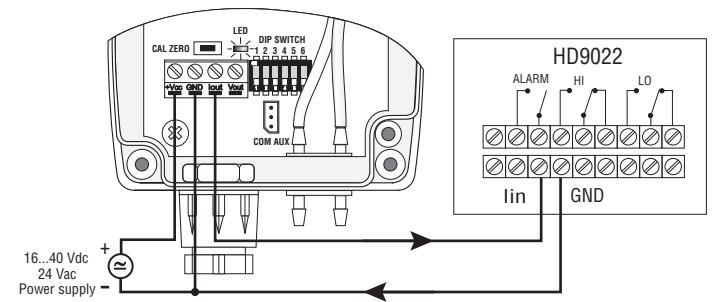


Fig. 7: current output 0...20 or 4...20 mA

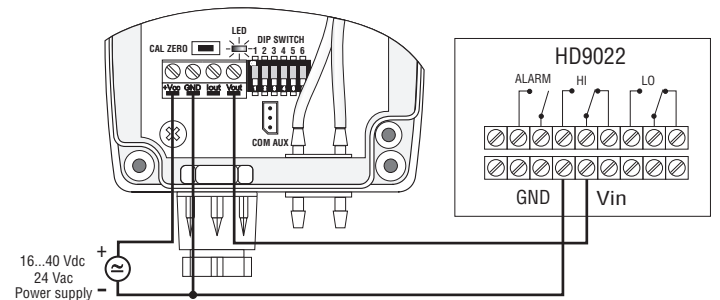


Fig. 8: voltage output 0...10 Vdc



HD 404T VERY LOW PRESSURE TRANSMITTER

The series of HD404T transmitters is able to measure relative pressures with reference to the atmosphere or differential in the range from 50 to 1000 Pa (0.2" H₂O to 5" H₂O). HD404T transmitters use a silicon "micromachined" type sensor compensated in temperature that has an excellent linearity, repeatability and stability over time. The output signal from the sensor is amplified and converted into a standard analogical output in current (4...20mA) and in one in voltage (0...10V), which, then, can be transmitted over long distances with a high immunity to noise.

In each model it's possible to choose, via a dip switch, between two measurement ranges in order to select the optimal scale for each application. Usually the low pressure transmitters are susceptible to the guidance by which they are mounted. In HD404T series there is available a special auto-zero circuit, which periodically equalize the differential pressure at the input sensor and corrects the offset; the transmitters, provided with this circuit, are insensitive to the mounting position. In addition, the circuit compensates autozero aging and the deviation of the zero of the sensor to temperature changes: virtually eliminates maintenance.



It's available the (L) "display" option, in which the pressure is visualized on a display with 4 digits in the selected measurement unit.

The (SR) "square root" is especially useful if the transmitter is connected to a Pitot or Darcy tube, as the output is directly proportional to the speed of airflow. The SR version with L option also allows to display, in addition to the pressure measured, the speed of airflow calculated. The SR version is configurable by the user by connecting the transmitter to a PC and sending serial commands via a standard communication software. It is possible to set the coefficient of the Pitot or Darcy tube used, the parameters for the calculation of the speed (airflow temperature, barometric pressure, differential static pressure in the duct), the speed unit of measurement (m/s or ft/s) and the speed full scale for the analog output. The transmitters are ready to use and are supplied calibrated at 3 points by the manufacturer.


Typical applications for HD404T series are clean room monitoring, filters' control, flow measures (matched with the Pitot tube), the air conditioning control and the ventilation one.

TECHNICAL COMMON FEATURES @ 20°C AND 24VDC

Sensor	Piezoresistive
Measurement range	from 0...50 Pa (0...0,2" H ₂ O) to 0...1000 Pa (0...4" H ₂ O) relative and differential (see table) For the SR models, the speed measurement ranges depend on the tube constant, the temperature and the pressure (see table)
Output signal	0...10 Vdc $R_L > 10\text{ k}\Omega$ and 4...20 mA $R_L < 500\ \Omega$
Accuracy	It depends on the model (see table)
Response time	1 s (fast) or 4 s (slow) selectable through jumper
Over-pressure limit	25 kPa
Compatible media	Only air and non-aggressive gases
Power supply	24 Vac $\pm 10\%$ or 16...40 Vdc
Absorption	< 1 W
Pressure fit	With $\varnothing 5\text{ mm}$ flexible tube
Electrical connections	Terminal board with screws, max 1.5 mm ² , PG9 conduit for input cable
Working conditions	-10...+60 °C (-5...+50 °C for models with auto-zero AZ), 0...95% RH
Storage temperature	-20...+70 °C
Case sizes	80 x 84 x 44 mm
Degree of protection	IP67

INSTALLATION

In all the models, the sensor and the electronic are contained in a sturdy plastic case with an IP67 protection degree. Opening the lid are available 3 mm diameter holes that let you set the base of the transmitter directly to a panel or a wall.

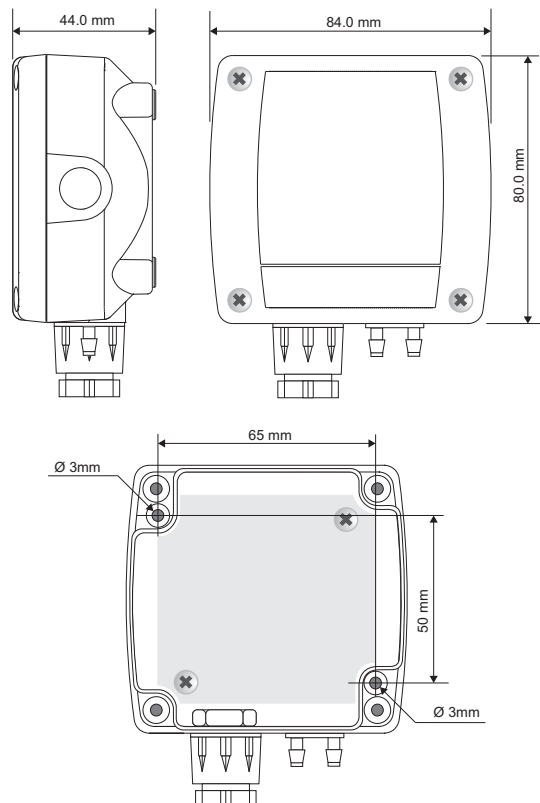


HD404T can be mounted in any position, but typically on a vertical wall with the pressure inlets facing downwards. The gap from zero due to the mounting position can be compensated by using CAL ZERO button. The procedure to follow for manual calibration of zero is the following one:


- Make sure that the transmitter is powered by at least 1 hour;
- Disconnect both tubes from the + and – pressure inlets;
- Press CAL ZERO button until the red LED starts to flash;
- When the red led turns off, the zero procedure is completed and you can reconnect the tubes to pressure fits.

We suggest you to perform the auto-zero procedure at least once a year under normal working conditions.

In models with auto-zero circuit (AZ option), this procedure is regularly performed every 15 minutes without disconnecting the hoses from pressure taps. During the reset, which takes about 4 seconds, the analogical outputs and the display will remain frozen at the measured value. Models with auto-zero have virtually no need for maintenance.

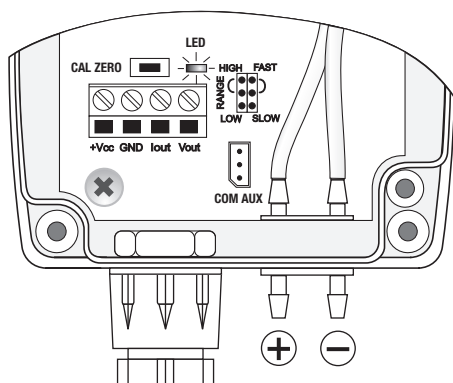

CAL ZERO button and configuration jumpers

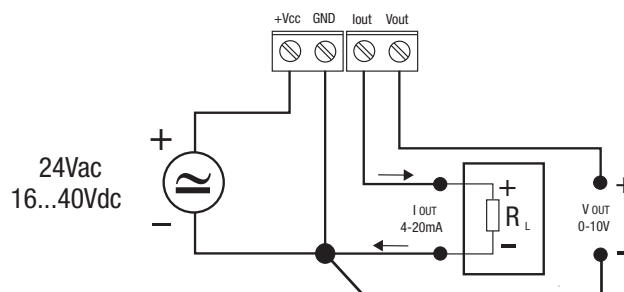

Electrical connections

CONFIGURATION

Setting the output range: the RANGE jumper allows you to choose one of this output ranges: with LOW you choose the low range, with HIGH the extended range.

Response time setting: the FAST SLOW jumper lets you choose the response time of the transmitter: in FAST position the measurement is integrated over 1 s, while in SLOW position is integrated over 4 s. SLOW position is recommended if there are conditions of turbulence or disruption of air flow.

Setting of the parameters in the SR versions: the transmitters are preset by the factory. To change the settings, proceed as follows:

- Connect the transmitter COM AUX serial output to the PC RS232 (through the **RS27** cable) or USB (through the **CP27** cable) port. If the CP27 cable is used, install in the PC the related USB drivers.
- In the PC, run a serial communication software (e.g. Hyperterminal), set the baud rate to 115200 and the communication parameters to 8N2.
- To change the display configuration (commands O3E, O3D, O4E, O4D, O5E, O5D) it is necessary to send the CAL START command to enter the configuration mode. It is not necessary to send the CAL START command to change the parameters related to the speed measurement (tube coefficient, temperature, pressure, full scale for the analog output).
- Send the commands in the following table to set or read the configuration parameters of the transmitter:

SUMMARY TABLE OF MODELS AND ACCURACY

MODEL	RANGE		ACCURACY %F.S. RANGE HIGH (0...+50 °C)	LONG TERM STABILITY (1 YEAR)	
	LOW	HIGH		AZ	NO AZ
	Pa				
HD404T1PG(-L-SR)	0...50 Pa	0...100 Pa	±3%	≤±1Pa	
HD404T2PG(-L-SR)	0...100 Pa	0...250 Pa	±1,5%	≤±1Pa	
HD404T3PG(-AZ-L-SR)	0...250 Pa	0...500 Pa	±1%	≤±1Pa	≤±8Pa
HD404T4PG(-AZ-L-SR)	0...500 Pa	0...1000 Pa	±1%	≤±1Pa	≤±8Pa
HD404T1PD(-AZ-L)	-50...+50 Pa	-100...+100 Pa	±1,5%	≤±1Pa	
HD404T2PD(-AZ-L)	-100...+100 Pa	-250...+250 Pa	±1%	≤±1Pa	
HD404T3PD(-AZ-L)	-250...+250 Pa	-500...+500 Pa	±1%	≤±1Pa	≤±8Pa
HD404T4PD(-AZ-L)	-500...+500 Pa	-1000...+1000 Pa	±1%	≤±1Pa	≤±8Pa
	mmH ₂ O				
HD404T1MG(-AZ-L-SR)	0...5 mmH ₂ O	0...10 mmH ₂ O	±3%	≤±0,1 mmH ₂ O	
HD404T2MG(-AZ-L-SR)	0...10 mmH ₂ O	0...25 mmH ₂ O	±1,5%	≤±0,1 mmH ₂ O	
HD404T3MG(-AZ-L-SR)	0...25 mmH ₂ O	0...50 mmH ₂ O	±1%	≤±0,1 mmH ₂ O	≤±0,8 mmH ₂ O
HD404T4MG(-AZ-L-SR)	0...50 mmH ₂ O	0...100 mmH ₂ O	±1%	≤±0,1 mmH ₂ O	≤±0,8 mmH ₂ O
HD404T1MD(-AZ-L)	-5...+5 mmH ₂ O	-10...+10 mmH ₂ O	±1,5%	≤±0,1 mmH ₂ O	
HD404T2MD(-AZ-L)	-10...+10 mmH ₂ O	-25...+25 mmH ₂ O	±1%	≤±0,1 mmH ₂ O	
HD404T3MD(-AZ-L)	-25...+25 mmH ₂ O	-50...+50 mmH ₂ O	±1%	≤±0,1 mmH ₂ O	≤±0,8 mmH ₂ O
HD404T4MD(-AZ-L)	-50...+50 mmH ₂ O	-100...+100 mmH ₂ O	±1%	≤±0,1 mmH ₂ O	≤±0,8 mmH ₂ O
	inchH ₂ O				
HD404T1IG(-AZ-L-SR)	0...0.2 inchH ₂ O	0...0.4 inchH ₂ O	±3%	≤±0,04 inchH ₂ O	
HD404T2IG(-AZ-L-SR)	0...0.4 inchH ₂ O	0...1 inchH ₂ O	±1,5%	≤±0,04 inchH ₂ O	
HD404T3IG(-AZ-L-SR)	0...1 inchH ₂ O	0...2 inchH ₂ O	±1%	≤±0,04 inchH ₂ O	≤±0,04 inchH ₂ O
HD404T4IG(-AZ-L-SR)	0...2 inchH ₂ O	0...4 inchH ₂ O	±1%	≤±0,04 inchH ₂ O	≤±0,04 inchH ₂ O
HD404T1ID(-AZ-L)	-0.2...0.2 inchH ₂ O	-0.4...0.4 inchH ₂ O	±1,5%	≤±0,04 inchH ₂ O	
HD404T2ID(-AZ-L)	-0.4...0.4 inchH ₂ O	-1...+1 inchH ₂ O	±1%	≤±0,04 inchH ₂ O	
HD404T3ID(-AZ-L)	-1...+1 inchH ₂ O	-2...+2 inchH ₂ O	±1%	≤±0,04 inchH ₂ O	≤±0,04 inchH ₂ O
HD404T4ID(-AZ-L)	-2...+2 inchH ₂ O	-4...+4 inchH ₂ O	±1%	≤±0,04 inchH ₂ O	≤±0,04 inchH ₂ O

Command	Reply	Description
03E	&	Shows alternately speed and pressure on display
03D	&	Disables the alternating display of speed and pressure
04E	&	Automatic change of speed resolution on display (0,1 or 0,01) depending on the measured value ⁽¹⁾
04D	&	Fixed centesimal speed resolution on display ⁽¹⁾
05E	&	Sets ft/s as speed unit of measurement on display <i>Note: the symbol ft/s does not appear on display</i>
05D	&	Sets m/s as speed unit of measurement on display (default)
CK n.n...	&	Sets the Pitot or Darcy tube coefficient to the value n.n... The value must be between 0.6 and 1.2 (default = 1.0)
RK	n.nnnnnl	Reads the value of the tube coefficient set in the transmitter
CB nnnn. nn...	&	Sets the barometric pressure to the value nnnn.nn... mbar The value must be between 500 and 1500 mbar (default = 1013.25 mbar)
RB	nnnn.nnnl	Reads the value of the barometric pressure in mbar set in the transmitter
CT n...	&	Sets the airflow temperature in tenths of °C (default = 160 → 16.0 °C) The value must be between -999 (→ -99.9 °C) and 2000 (→ 200.0 °C)
RT	n...l	Reads the value of the temperature, in tenths of °C, set in the transmitter
CP nnnn...	&	Sets the differential static pressure ⁽²⁾ in mbar (default = 0)
RP	nnnn...l	Reads the value of the differential static pressure ⁽²⁾ set in the transmitter
CS nnnn	&	Sets the full scale speed, in hundredths of m/s, for the analog output (default = see table). The max settable value is 10000 (→ 100.00 m/s)
RS	nn.nnl	Reads the speed full scale value, in m/s, for the analog output
SV	nn.nnl	Prints the max measurable speed as a function of the transmitter full scale pressure and values set for the parameters. The value is in the speed unit of measurement set in the transmitter.

⁽¹⁾ The speed is calculated from the pressure measure through a quadratic relationship. For this reason, the speed resolution is lower for low pressure values measured, and the change of the speed measurement on the display appears rather discontinuous if the fixed centesimal resolution is used. If a more uniform speed change on display is desired, enable the automatic speed resolution change as a function of the measured value.

⁽²⁾ The differential static pressure is equal to the difference between the absolute static pressure inside the duct and the barometric pressure. The differential static pressure is zero if the duct is open (in contact with the atmosphere), while it can be different from zero in case of closed ducts.

To exit the configuration mode after sending the CAL START command, send the CAL END command (the transmitter automatically exits the configuration mode after 5 minutes from the last command sent).

DISPLAY

Models with L suffix are provided with a LCD display with 4 digits.

Pressure display resolution:

50 - 100 - 250 - 500 Pa	→	0.5 Pa
1000 Pa	→	1 Pa
5 - 10 - 25 - 50 mmH ₂ O	→	0.05 mmH ₂ O
100 mmH ₂ O	→	0.1 mmH ₂ O
0.2 - 0.4 - 1 - 2 - 4 inchH ₂ O	→	0.002 inchH ₂ O

Speed display resolution in the SR models: for all the ranges, the speed resolution can be centesimal fixed or with automatic change from decimal to centesimal as a function of the measured value. The selection between the two options is made via the serial commands 04E and 04D.

Error reporting:


Undr	→	it appears if the measured value is smaller than the minimum value that can be measured
OvEr	→	it appears if the measured value exceeds the maximum value that can be measured
CAL Error	→	it appears when the zero calibration is finished if the maximum offset value that can be corrected is exceeded.

SPEED FULL SCALE IN THE SR MODELS


In the SR models, the maximum speed measurable depends on the coefficient of the tube used, the temperature, the barometric pressure and the differential static pressure set in the transmitter. The serial command SV allows to read the maximum speed measurable as a function of the parameters setting. The following table shows the maximum speed measurable by the various models with the values of the parameters preset by the factory: tube coefficient **K = 1.0**, temperature **T = 16.0 °C**, barometric pressure **Patm = 1013.25 mbar**, differential static pressure **Ps = 0**.

MODEL	MAX SPEED MEASURABLE (@ K = 1, T = 16°C, Patm = 1013.25 mbar, Ps = 0)		DEFAULT FULL SCALE FOR THE ANALOG OUTPUT (changeable with the CS command)
	LOW	HIGH	
HD404T1PG-AZ(-L)-SR	9,06 m/s	12,82 m/s	10 m/s
HD404T2PG-AZ(-L)-SR	12,82 m/s	20,27 m/s	20 m/s
HD404T3PG(-AZ-L)-SR	20,27 m/s	28,67 m/s	25 m/s
HD404T4PG(-AZ-L)-SR	28,67 m/s	40,55 m/s	40 m/s
HD404T1MG-AZ(-L)-SR	8,98 m/s	12,70 m/s	10 m/s
HD404T2MG-AZ(-L)-SR	12,70 m/s	20,08 m/s	20 m/s
HD404T3MG(-AZ-L)-SR	20,08 m/s	28,39 m/s	25 m/s
HD404T4MG(-AZ-L)-SR	28,39 m/s	40,16 m/s	40 m/s
HD404T1IG-AZ(-L)-SR	9,05 m/s	12,80 m/s	10 m/s
HD404T2IG-AZ(-L)-SR	12,80 m/s	20,24 m/s	20 m/s
HD404T3IG(-AZ-L)-SR	20,24 m/s	28,62 m/s	25 m/s
HD404T4IG(-AZ-L)-SR	28,62 m/s	40,48 m/s	40 m/s

The following graphs show the change of the maximum measurable speed value (normalized to 1 for $T=16.0\text{ }^{\circ}\text{C}$ and $\text{Patm}=1013.25\text{ mbar}$) with the change of the temperature and barometric pressure.

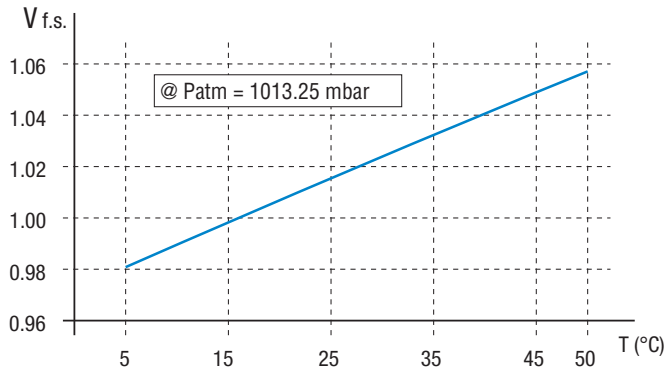


Change of the full scale speed with the temperature at constant barometric pressure

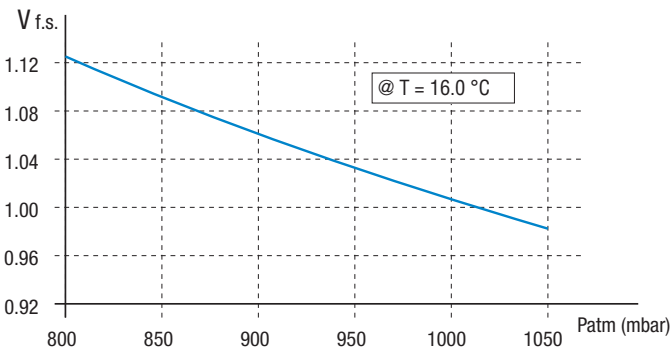

Change of the full scale speed with the barometric pressure at constant temperature

In the SR models, the serial command "CS nnnn" allows to associate to the full scale of the analog output a speed value chosen by the user, even different from the maximum value actually measurable by the transmitter.

HD404T 1P - G - AZ - L - SR

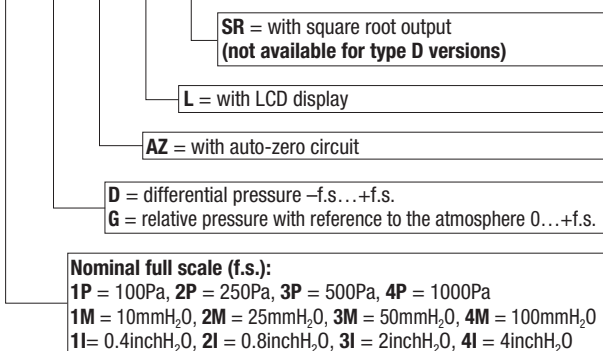

ACCESSORIES

Supplied:


- N°1 piece of Ø3.2/Ø6.4 silicone tube 2m long
- N°2 HD434T.5 plastic fittings

Under request:


- HD3719:** Flow offtake for square or cylindrical channel. Two pieces of Ø3.2/Ø6.4 tube 1m long.
- HD3721:** Flow offtake for plastic material cylindrical channel. Two pieces of Ø3.2/Ø6.4 tube 1m long.
- RS27:** RS232 null-modem serial connection cable with 9-pole SubD connector for the PC and 3-pole connector for the COM AUX port of the instrument.
- CP27:** Serial connection cable with USB connector for the PC and 3-pole connector for the COM AUX port of the instrument. The cable has a builtin USB/RS232 converter and connects the transmitter directly to the USB port of the PC.

Pitot tubes: see list and dimensions at next page.

AP3719 duct probe

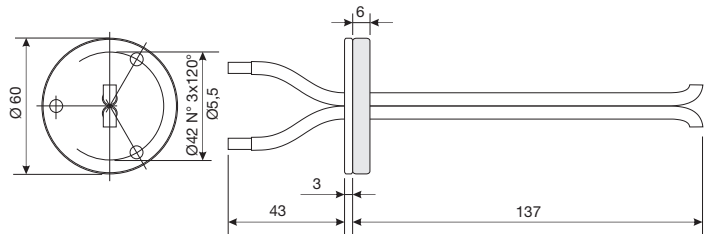


AP3721 duct probe:

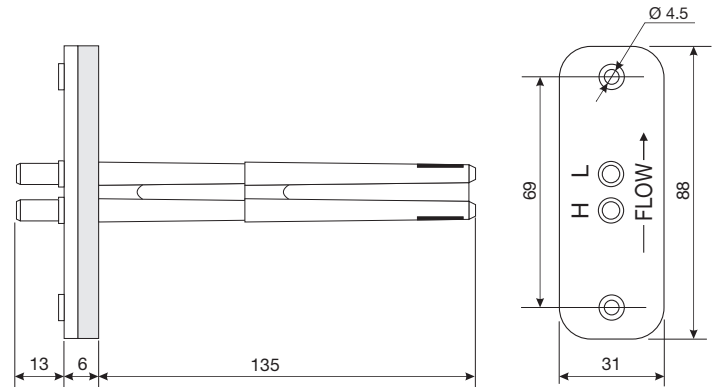


HD404T3PD

PITOT TUBES

Stainless steel Pitot tubes for air speed measurement, supplied with silicone tube Ø 6mm external, Ø 4mm internal, length 2m.

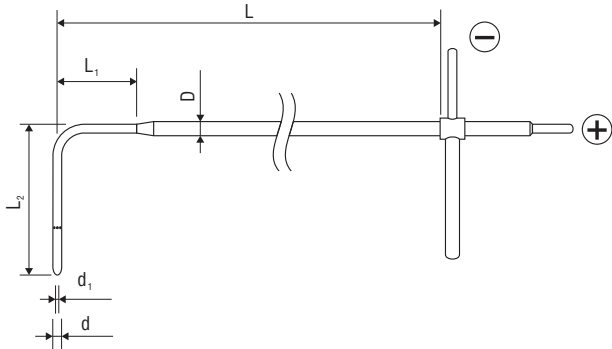


	d mm	d ₁ mm	D mm	L mm	L ₁ mm	L ₂ mm	Temp. °C	Material
T1-300	3	1	6	300	30	72	0...600°C	AISI 316
T2-400	5	2	8	400	45	120		
T2-600	5	2	8	600	45	120		
T3-500	8	3,2	8	500	---	192		
T3-800	8	3,2	8	800	---	192		
T4-500	10	4,0	10	500	---	240		
T4-800	10	4,0	10	800	---	240		
T4-1000	10	4,0	10	1000	---	240		

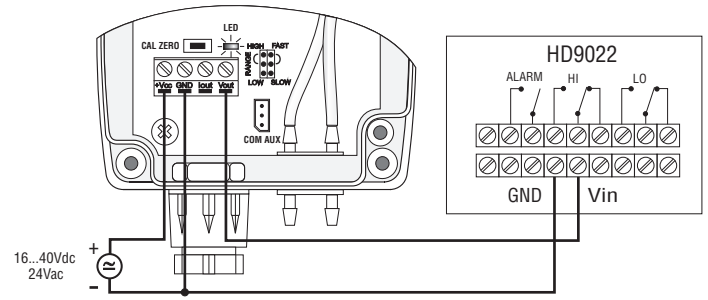


Voltage output 0...10Vdc

Examples of connection with HD9022 indicator regulator

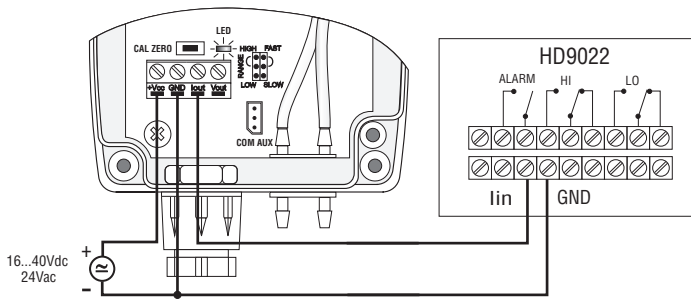

Current output 4...20mA

Pressure

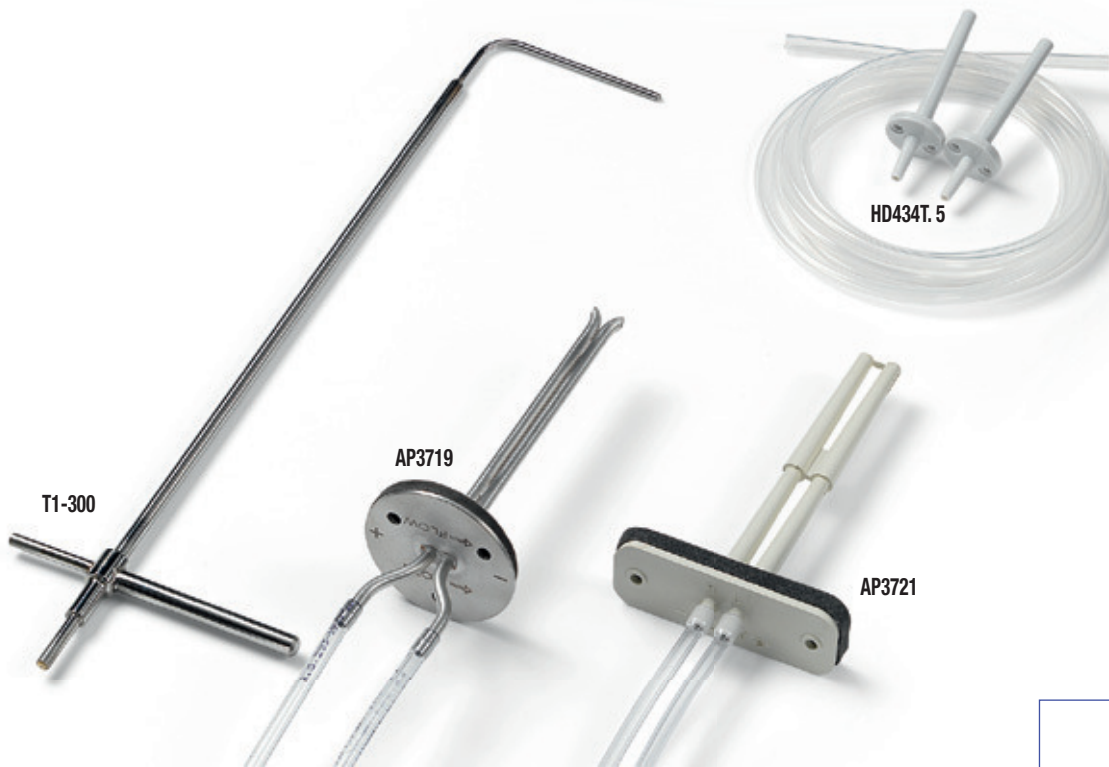



HD 9408T BARO HD 9408TR BARO HD 9908T BARO



HD 9408T BARO, HD 9408TR BARO, HD 9908T BARO BAROMETRIC TRANSMITTERS

HD 9408T BARO, HD 9408TR BARO and **HD 9908T BARO** are analog output electronic barometers. They use a piezoresistive sensor element which gives extremely accurate and stable measurement of the atmospheric pressure and assures excellent repeatability, low hysteresis and very good temperature stability. The output signal of the sensor is conditioned to provide a voltage or a current output linearly proportional to the barometric pressure. The transmitters are ready as they have been calibrated at the factory. A zero adjustment potentiometer is available for offset to station elevation.

HD9408T BARO requires a continuous dc power supply, its low power consumption (< 4 mA) makes it ideal for portable and remote battery or solar powered applications. It is available in different kinds of analog output: 0-1 Vdc, 0-5 Vdc (1-5 Vdc, 1-6 Vdc on request) or 4-20 mA (two wires).

HD 9408TR BARO offers superior temperature performance: the internal circuitry allows the sensor to work at constant temperature so that it achieves

accurate temperature compensation over the whole range from -40°C to +60°C. **HD 9408TR BARO** requires a continuous dc power supply and a differential cabling connection to achieve best results. It is available in different output versions: 0÷1 Vdc, 0÷5 Vdc (1÷5 Vdc, 1÷6 Vdc on request).

HD 9908T BARO, unlike the other models, is equipped with a display showing the pressure measurements, an analog output 0÷20 mA, 4÷20 mA, 0÷1 V and 0÷5 V (0÷10 V on request) configurable by the customer and with an ON/OFF relay output with programmable alarm threshold.

HD 9908T BARO requires a 24 Vac (or 230 Vac on request) power supply.

HD 9408T BARO, HD 9408TR BARO and **HD 9908T BARO** are low cost and excellent performance solutions for meteorological applications, environmental monitoring systems, metrological and environmental data logging, altitude applications, barometric pressure compensation in the performance of internal combustion engine, cleanroom barometric pressure compensation, testing of vehicle emissions.

HOUSING AND INSTALLATION

In all models the sensor electronics are housed in a sturdy MACROLON with IP67 protection. Opening the lid holes are available that allow you to secure the base of the transmitter directly to a panel or a wall. The measurement accuracy is independent of the position of the transmitter. However, it is advisable to mount the transmitter so that the sensor is facing down to reduce dust and dirt on the filter. If the installation is in an open environment is recommended to use a special static port to minimize errors caused by the wind flow on the input pressure.



CONNECTION DIAGRAM AND OPERATION





- Make the power connections for the HD 9908T BARO.
- Make the connections for the relay output, the relay contact is free.
- Select the analog output 0÷20 mA, 4÷20 mA, 0÷1 V, 0÷5 V by means of the jumper.
- Switch on the instrument, press the PUSH button and turn the SET trimmer to set the desired threshold value between 800 and 1100 mbar; the set value is shown on the LCD display.
- Using the trimmer \square , set the desired HYS (=hysteresis) value between 5 and 50 mbar.
- The instrument will now indicate the barometric pressure; HI led, LO led or ALARM led and ALARM relay will switch on if one the following cases occurs (see table 1).

NOTE: the ALARM led comes on to indicate that the relay is energized and the contact is closed.



- **Once installation is completed, check that the cover is tightly closed; the same applies to the grommets.**

TABLE 1	HI	LO	LED ALARM
MEASURE > SET, MEASURE < SET + HYS	ON	OFF	OFF
MEASURE > SET, MEASURE > SET + HYS	ON	OFF	ON
MEASURE < SET, MEASURE > SET - HYS	OFF	ON	OFF
MEASURE < SET, MEASURE < SET - HYS	OFF	ON	ON

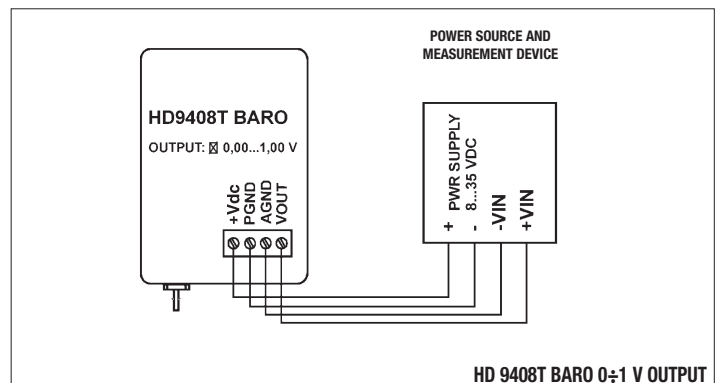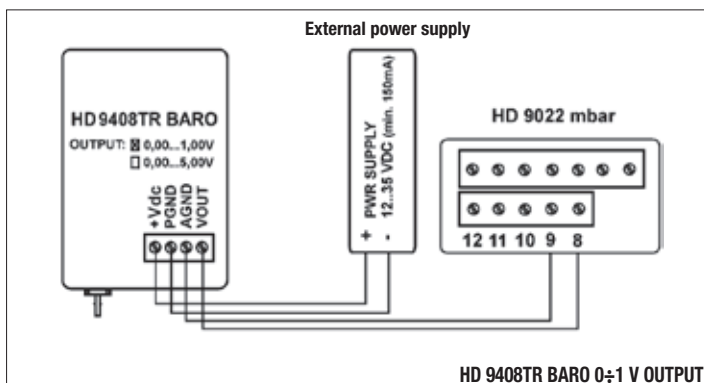

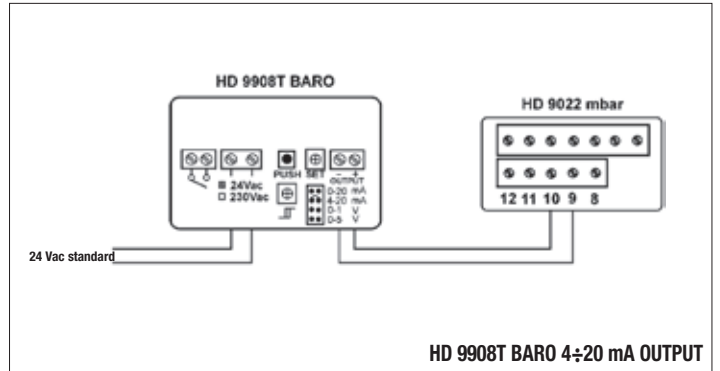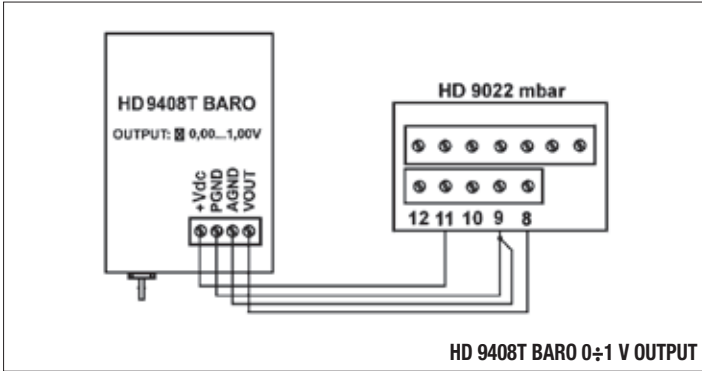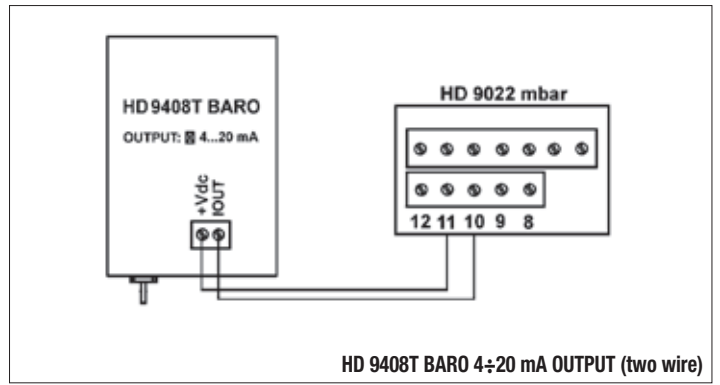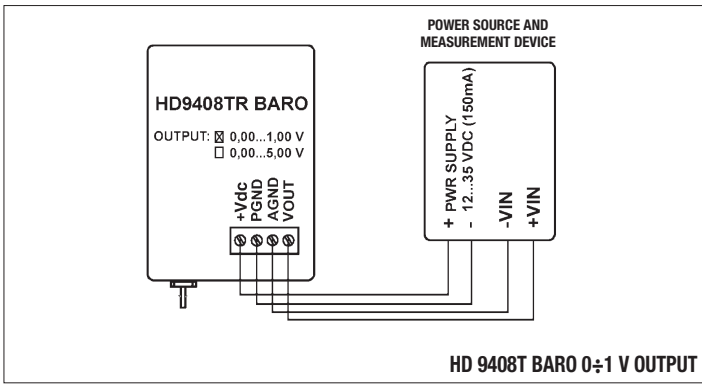

	HD9408T BARO	HD9408TR BARO	HD9908T BARO
Sensor type	Piezoresistive diaphragm		
Measuring range	800 ÷ 1100 mbar / 600 ÷ 1100 mbar on request		
Analog output	0 ÷ 1 Vdc standard; 0 ÷ 5 Vdc, 1 ÷ 6 Vdc and 4 ÷ 20 mA (two wires) on request	0 ÷ 1 Vdc standard; 0 ÷ 5 Vdc, 1 ÷ 5 Vdc and 1 ÷ 6 Vdc on request	0 ÷ 20 mA, 4 ÷ 20 mA, 0 ÷ 1 V and 0 ÷ 5 V (0 ÷ 10 V on request), configurable by means of a jumper.
Accuracy	± 0.5 mbar, @ 20°C	± 0.5 mbar, @ 20°C	Display: ± 1 mbar, @20°C Analog output: ± 0.8 mbar, @ 20°C
Resolution	Infinite	Infinite	Display: 1 mbar Analog output: Infinite
Thermal effects	< 1% F.S., zero; <1% F.S., span over -20°C to +60°C (-4° to 140°F)	± 0.8 mbar over -40°C to +60°C (-40° to 40°F)	< 1% F.S. zero, <1% F.S. span over -20°C to +60°C (-4° to 140°F)
Long term stability	< 0.25 % F.S. over 6 months at 20°C	< 0.2 % F.S. over 6 months at 20°C	< 0.25 % F.S. over 6 months at 20°C
Turn on time	1 sec. to 99% of full scale reading	5 min @ 24 Vdc supply to 99% of full scale reading	5 sec. to 99% of full scale reading
Response time	< 200 ms after pressure stabilization		
Relay contact output	Absent	Absent	3A/230 Vac resistive load
Set point	Absent	Absent	Configurable from 800 to 1100 mbar
Supply Voltage	8 ÷ 35 Vdc	12 ÷ 35 Vdc	24 Vac ±10% (230 Vac on request)
Supply current	< 4 mA	25 mA @ 20°C, 24 Vdc (warm-up 120 mA)	1VA
Operating Temperature	-30 ÷ +60°C	-40 ÷ +60°C	-20 ÷ +60°C
Media compatibility	Air and dry gases only		
Overload pressure	2 bar - 30 PSI		

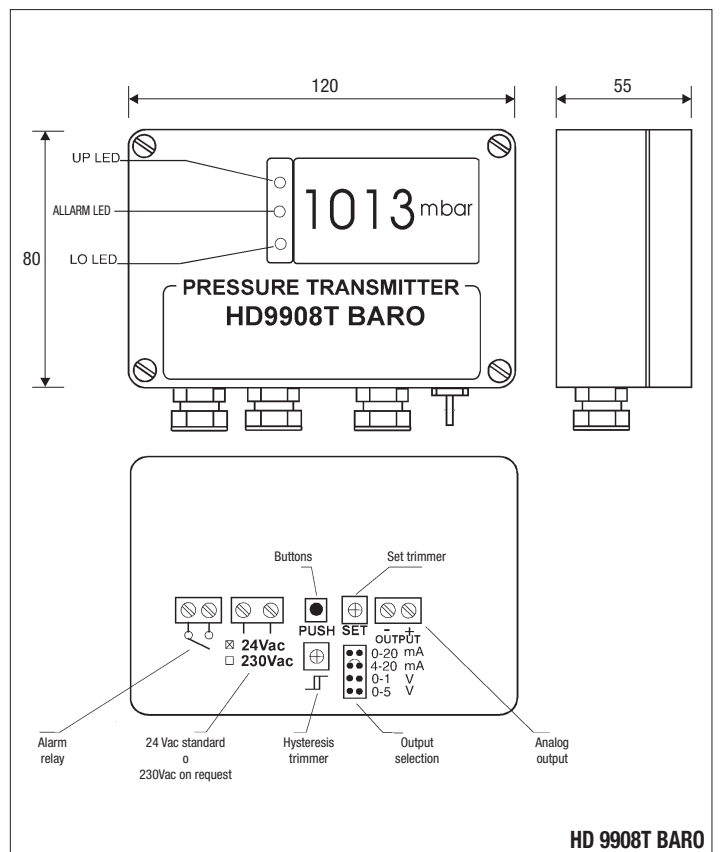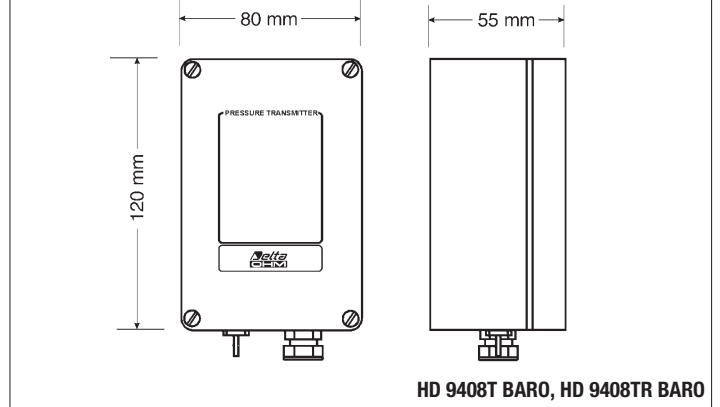

ORDERING CODE

HD9408T BARO 800÷1100mbar barometric transmitter output 0÷1Vdc. Upon request output: 0÷5Vdc, 1÷5Vdc, 1÷6Vdc, 4÷20mA. Working temperature range -30°C ÷ +60°C.

HD9408TR BARO 800÷1100mbar barometric transmitter output 0÷1Vdc. Upon request output 0÷5Vdc, 1÷5Vdc. Temperature working range -40°C ÷ +60°C, heated sensor

HD9908T BARO 800÷1100mbar digital barometric transmitter with LCD indication. Outputs: 0÷20mA, 4÷20mA, 0÷1Vdc, 0÷5Vdc. Working temperature range -20°C ÷ +60°C.

Pressure



HD9408PS 50 STATIC PORT FOR BAROMETRIC MEASUREMENTS



The measurement of the barometric pressure in free field can give incorrect values of hundred pascal fluctuation and wind direction. With the static port for barometric measurements, HD9408PS 50 can minimize these errors because, in addition to act as a filter (brake) against the dynamic pressure of the wind, the barometer can operate correctly even in the presence of snow or ice and comply with the recommendations of the WMO (World Meteorological Organization). The materials used for the construction of the static port are UV resistant and can operate in temperatures between -40°C and +80°C.

INSTALLATION AND CONNECTION

Installation is simple: it must be installed away from buildings, trees or any other source which can disrupt the flow of wind. To install the bracket is available HD9408PS 56 and three stainless steel screws M5x16 Acc. The connection of the static to the barometer, for example, HD9408T or HD9408TR, is made with a special tube HV55 (internal diameter of 3mm, 6mm outer diameter) and UV resistant to climate changes. Maintenance or cleaning is minimal. The plastic parts are manufactured by BASF LURAN S777K. Clean using non aggressive detergents compatible with the material.

TECHNICAL SPECIFICATIONS

According to recommendation of the WMO, the deviation allowed measurement of wind speed 20meters/second is equal to 0.3mbar, corresponding to 300 Pascal. The HD9408PS 50 static port for barometric measurements falls within that value. The following tables show the values obtained from the tests performed in the wind tunnel.

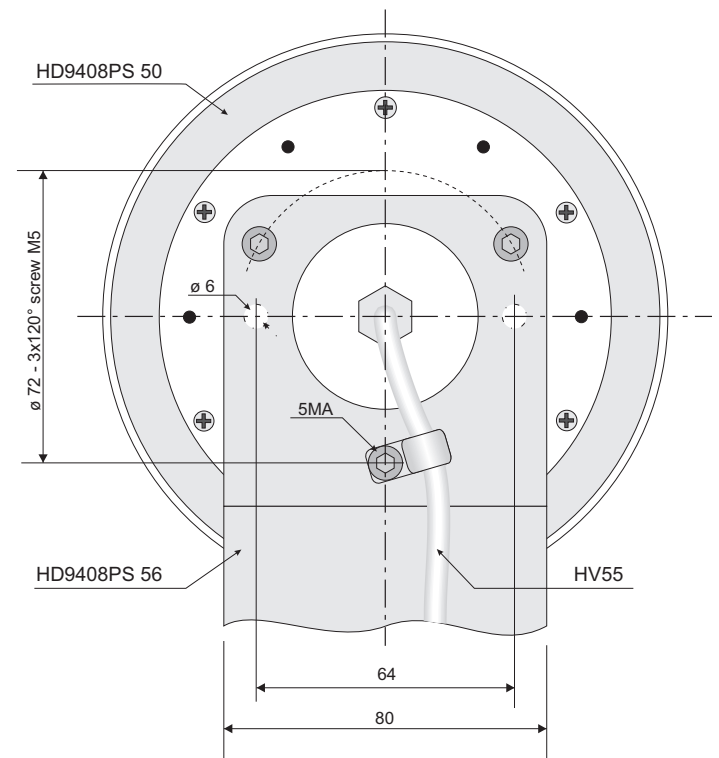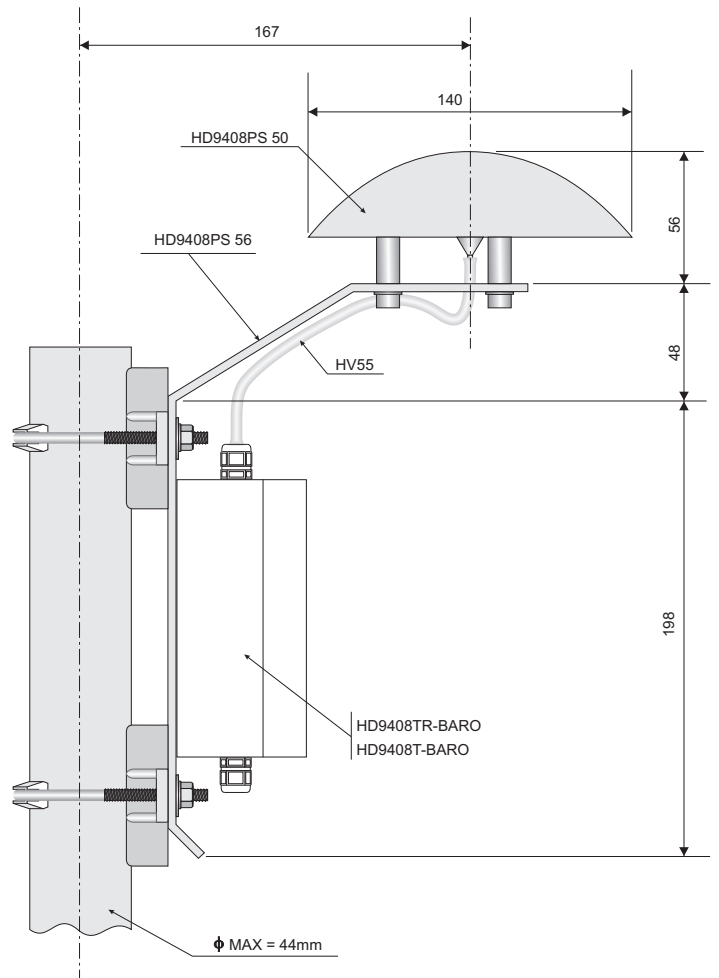

Error due to the dynamic pressure	Lower than 0.3mbar @20°C
Working temperature	-40°C... +80°C
Connection pipe (for a tube with inside ϕ : 3mm, outside ϕ : 6mm)	ϕ 3.4 mm
Weight of the static port.	200 gr
Weight of the static port equipped with the bracket	570 gr

ORDERING CODE


HD9408PS 50K: Kit consists of static port, pole mounting bracket and HV55 tube

HD9408PS 50: Static port for barometric measurements equipped with the HV55 tube


HD9408PS 56: Mounting bracket for static port, barometer fastening, pole anchor

HV55: HV55 UV- and temperature-resistant silicone tube, inside \varnothing : 3mm, outside \varnothing : 6mm, L=400mm


TESTS MADE IN THE WIND TUNNEL

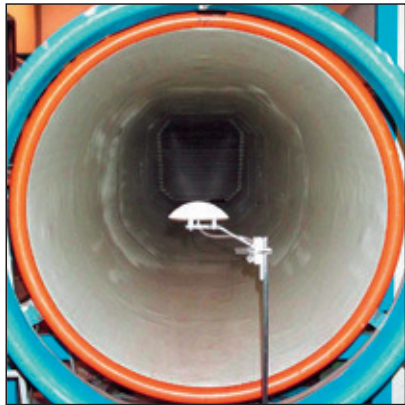


Static port put in front of the wind tunnel

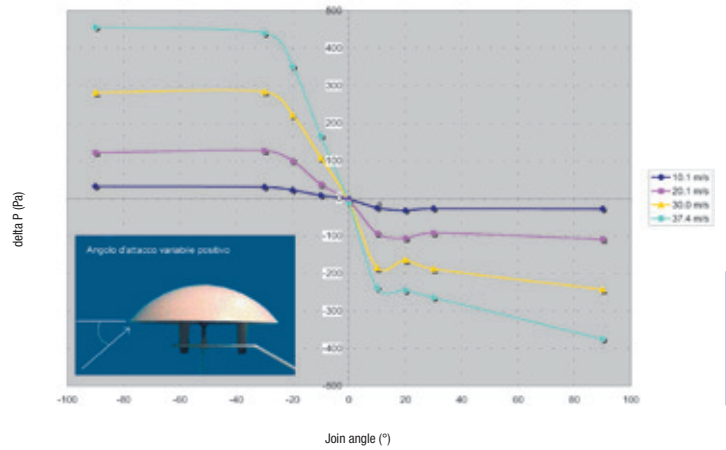


ΔP as a function join angle (yaw angle $\beta = 0^\circ$)

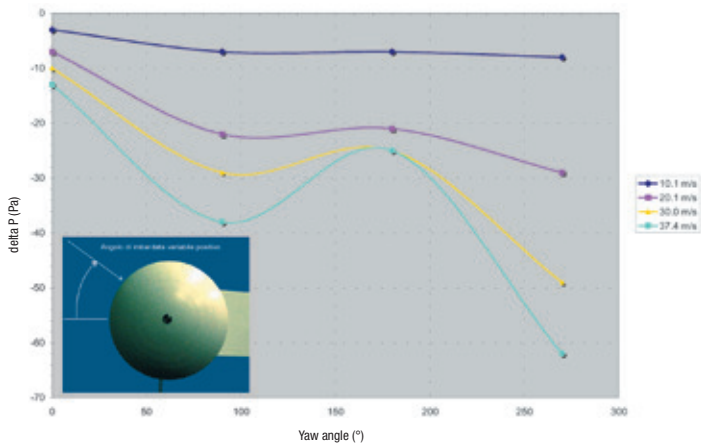


ΔP as a function of yaw angle (join angle $\alpha = 0^\circ$)

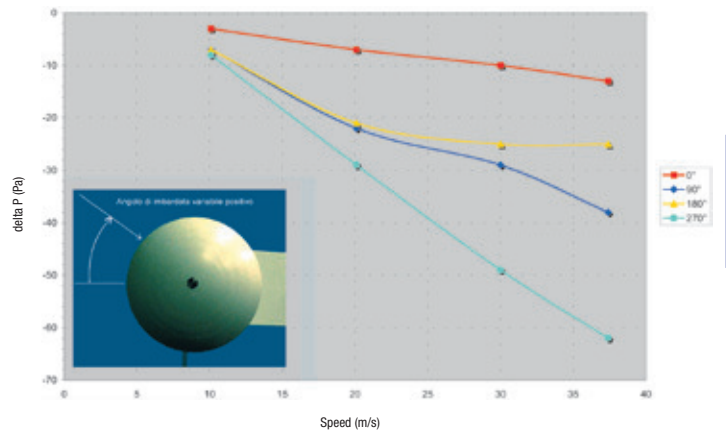

ΔP as a function of speed (join angle $\alpha = 0^\circ$)

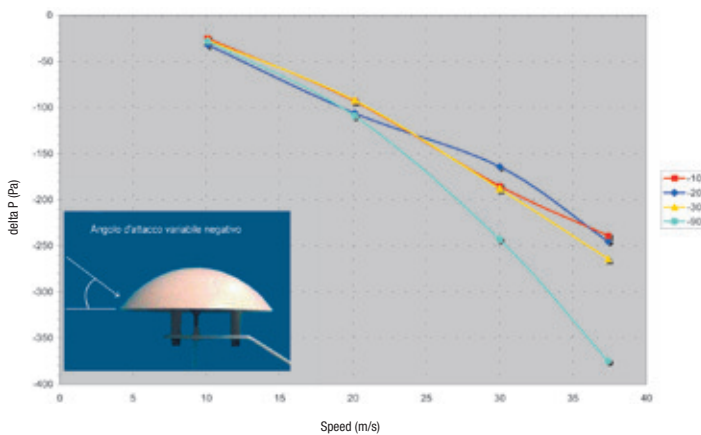

ΔP as a function of speed (yaw angle $\beta = 0^\circ$)

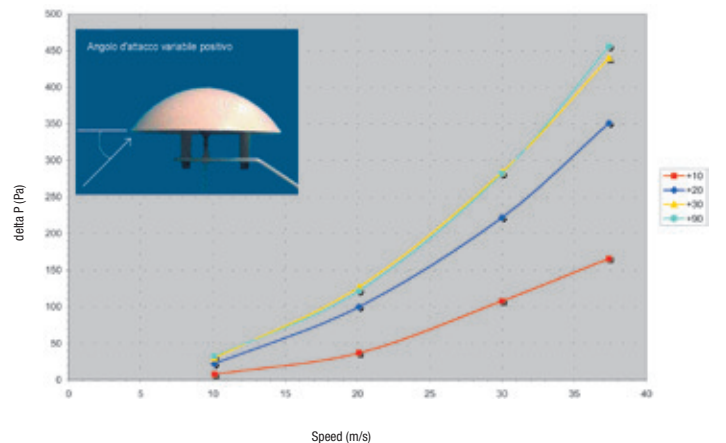

ΔP as a function of speed (yaw angle $\beta = 0^\circ$)

Pressure

Installation and connections

Fig. 1 shows the typical configuration: the display is inserted between the transmitter (8) and the DIN43650 female connector (1).

The display has two keys: one externally accessible (5) used for data display: current measurement, maximum, minimum and average values, timer; the internal key (9) is accessible only after removing the cover, and is used together with the external key for programming.

In box (3) over the display window, the unit of measurement label can be applied.

The card supporting the display and relevant cover can be rotated at 90° pitches by unscrewing the 4 screws at the corners.

Fig. 2 and 3 illustrate the electrical connections of the single model HD2601V.1 and the dual model HD2601V.2.

Vdc represents the direct current power source.

RL, RL1 e RL2 are the devices inserted in the current loop (PLC, recorder,...).

In the HD2601V.1 model, Rd represents the load connected to the open-collector digital output.

NOTE on Fig. 2: if a relay coil is controlled, insert a diode protecting the device's output.

The numbers 1, 2 and 3 refer to the information on the instrument's connector:

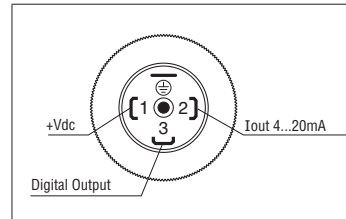


Fig.4 - HD2601V.1

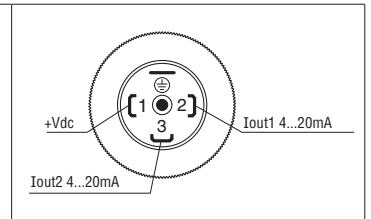


Fig.5 - HD2601V.2

To proceed with the electrical connections, open the connector by removing the screw (6) as shown in the Fig. 6:

Remove the gasket (1). Unscrew the fairlead (5) and take off the gasket (4). Use a screwdriver to pry and take off the connecting terminal (2). Make the connections as shown in the Fig. 7 and 8: if present, the shielded cable braid must be connected to the earth terminal.

Once the connections are made, close the connector.

HD 2601V.1, HD 2601V.2 4...20mA TRANSMITTER DISPLAYS WITH DIN43650 CON- NECTOR

The HD2601V.1 is a 4...20mA passive transmitter display with DIN43650 connector; the HD2601V.2 model is fitted with two independent dual-output transmitter viewers.

The display is inserted between transmitter and connector. Power is supplied by the 4...20mA current loop.

The programmable parameters are saved into a permanent memory and are not erased when power is disconnected.

All device functions are continuously monitored by an integral diagnostic system. In the single model HD2601V.1, the open-collector digital output can control a digital device or a relay coil.

The instrument display can be rotated at 90° or overturned to fit different installation conditions.

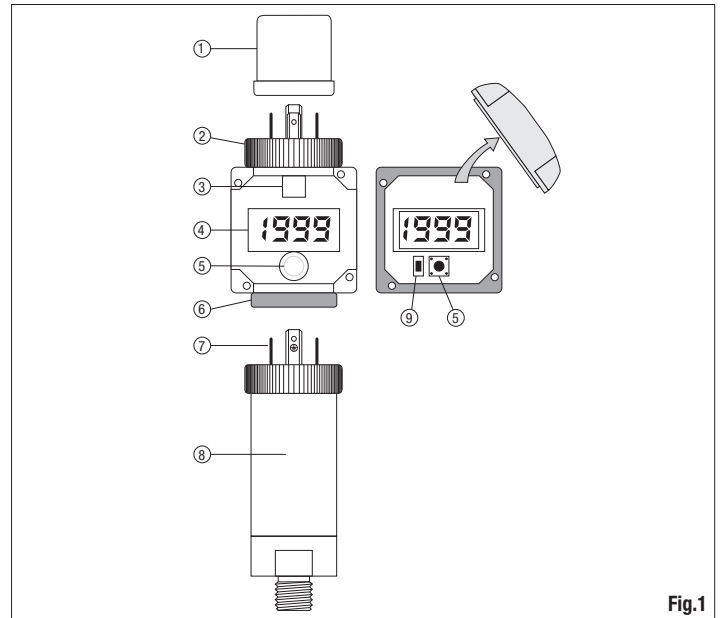


Fig.1

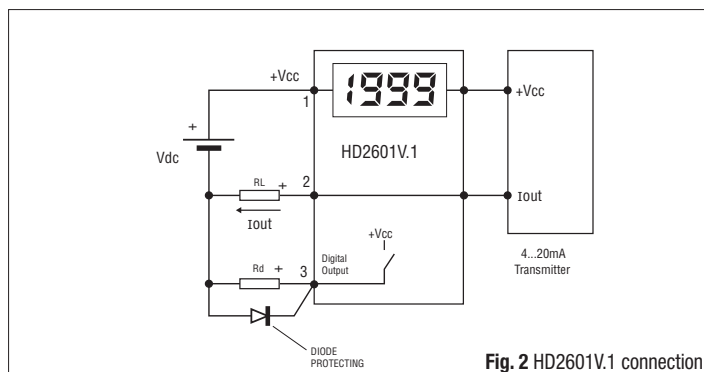


Fig. 2 HD2601V.1 connection

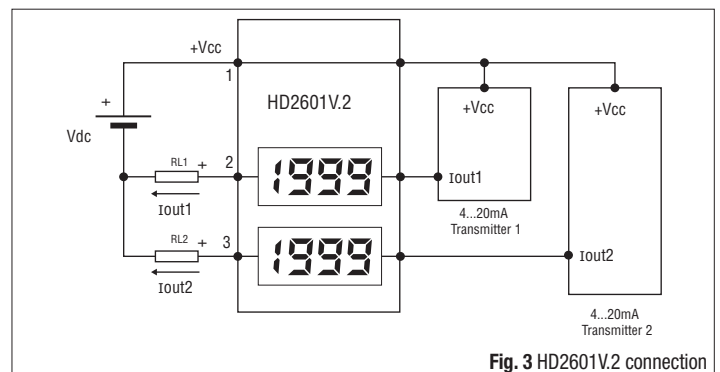


Fig. 3 HD2601V.2 connection

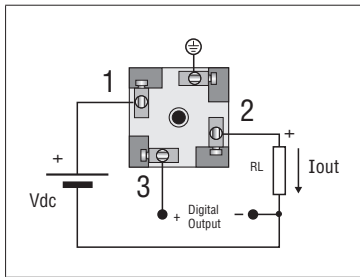


Fig. 7 - HD2601V.1
Electrical connections of the connecting terminal

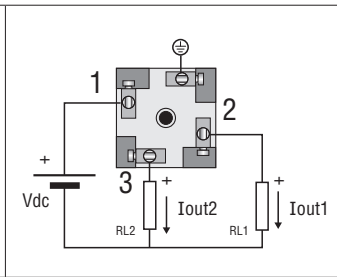


Fig. 8 - HD2601V.2
Electrical connections of the connecting terminal

The display is now ready for use: proceed with the programming of the scale factors.

Maximum load

The **RL maximum load** applicable to the 4...20mA loop, after insertion of the display, can be calculated as follows (see Fig. 2 and 3):

$$RL_{max} = \frac{Vdc - (Vtx + 6)}{0,022}$$

Vdc is the direct voltage, **Vtx** is the voltage drop on the transmitter (shown in the relevant technical characteristics).

Display

By pressing the external key (5) (see Fig. 1) it is possible to display, in sequence, the maximum, minimum and average of the captured measurements since the last reset (Record function), and the time passed since the last reset (Timer function).

The controls to reset the Record and Reset functions are independent.

The following table shows, in the same order, the indications provided by the display when repeatedly pressing the external key (5). The sequence starts from measurement mode:

Display indication	Notes
Current measurement	
"HIGH" message	It means "HIGH"
Maximum value	
"Lou" message	It means "LOW"
Minimum value	
"Avg" message	It means "AVERAGE"
Average value	
Y ##	## shows the years
d ##	## shows the days
H ##	## shows the hours
n ##	## shows the minutes
S ##	## shows the seconds
"MEAS"	returns to normal measurement
Current measurement	

To reset the Record (MAX, MIN and AVG) values, keep the external key pressed (5) for about 10 seconds until the display indicates "CLR" (CLEAR).

To reset the timer use the RST (RESET) function in the menu: for the details see the chapter dedicated to programming.

Programming

In order to program the display, the internal key needs to be accessed: unscrew the four screws in the corners of the display face-plate. The internal key (INT) is shown in Fig. 1 by number (9), the external key (EXT) by number (5).

Using the INT key the various menu items are scrolled. Use EXT to access the displayed item. Within the menu item, the two keys are used to increase or decrease the current information. To confirm the entered value press simultaneously the two keys.

To exit the menu, press INT and scroll all the items.

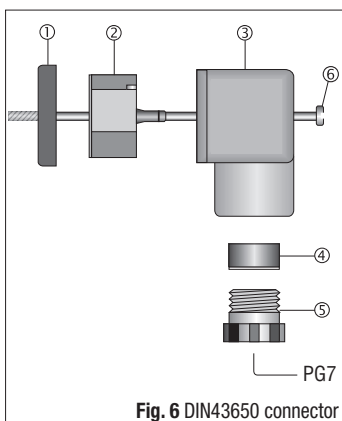


Fig. 6 DIN43650 connector



HD2601V.1



HD2601V.2

Menu Item	Description
dP	Selection of the decimal point position
ZP 4	Top scale value associated to the 4mA current
EP20	Bottom scale value associated to the 20mA current
filt	Sets the averaging filter on the measurement: this filter calculates the average current of the values captured. The instrument captures 4 measurements per second: one each 0.25s. By setting filt=0.25s no average is performed; with filt=5.00s the moving average is calculated on the last 20 samples. It is possible to set the intermediate values from 0.25s to 5.00s with 0.25s pitches.
HILO	If HILO=YES the display shows "Lo" if the current drops under the minimum threshold 4mA, and "HI" if the current raises over 20mA. If HILO=NO the display continues even outside the limits without showing any alarm.
S Fu (*)	Digital output (only HD2601V.1). By selecting YES the output is enabled, pressing NO the output is disabled.
S Pt (*)	Sets the digital output tripping point (see Fig. 9).
HYSt (*)	Sets the hysteresis width for digital output switching (see Fig. 9).
dir (*)	Sets the digital output tripping direction (see Fig. 9).
rst	Sets the timer to zero.

(*) This function is available only for the HD2601V.1 model.

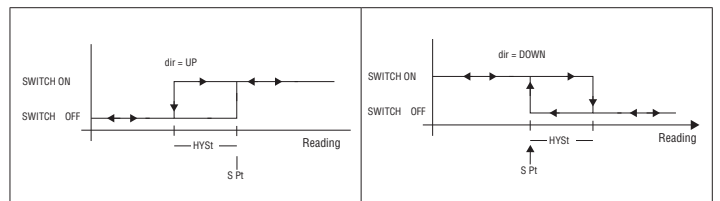


Fig. 9 Description of the Digital Output function

Technical characteristics

Display	4 digit LED, 7.6mm high. The decimal point position can be programmed.
Display range	-1999...+9999
Power	Power supplied by the 4...20mA current loop
Maximum voltage drop	6Vdc
Accuracy	0.2% of span ± 1 digit
Temperature drift	0.01%/°C
RL load resistance	$RL_{max} = [Vdc - (Vtx + 6)] / 0,022$
Speed of conversion	4 measurements per second
Electrical connections	DIN43650 connector
Parameter settings memory	Permanent
Programming	Using two keys (5 - 9), one internal
Display filter	Moving average that can be set from 1 (no average) to 20 samples
Error messages	HI = current over 20mA - LO = current under 4mA
Protection degree	IP65
Functioning temperature	-10...+80°C

Technical characteristics of the HD2601V.1 model digital output

Type of output	Open collector, ground output
Maximum current	100mA
Maximum reverse voltage	30Vdc

ORDERING CODES

HD2601V.1: Configurable sandwich LED indicator, plug-on, for transmitters with DIN 43650 connector and 4÷20 mA output, (i.e. HD2004T).

HD2601V.2: Configurable sandwich dual LED indicator, plug-on, for transmitters with DIN 43650 connector and 4÷20 mA outputs, (i.e. HD9008TRR).